



①

Connect the Installation head with Twister foundation

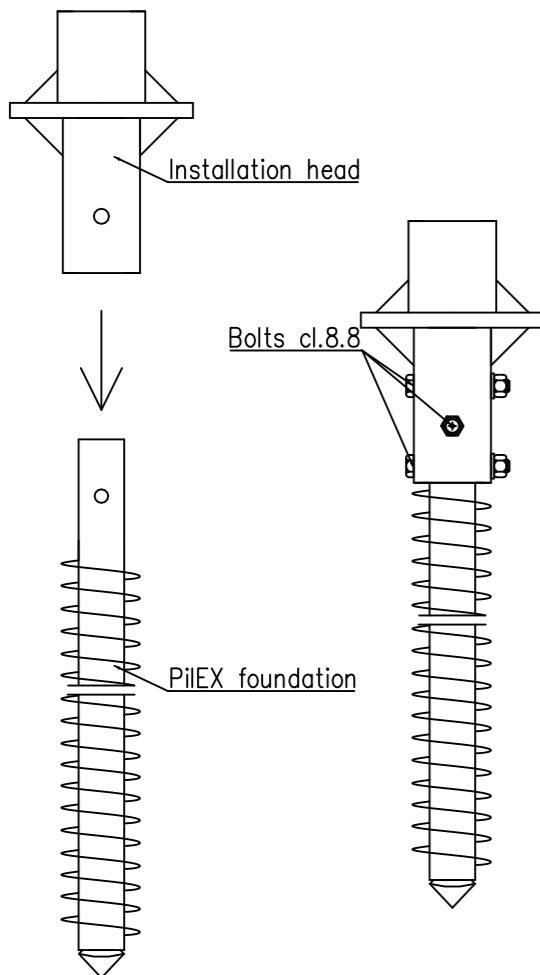


②

Twist the foundation to the ground.
Max. torque 8000 Nm.
Take off the mountig head.

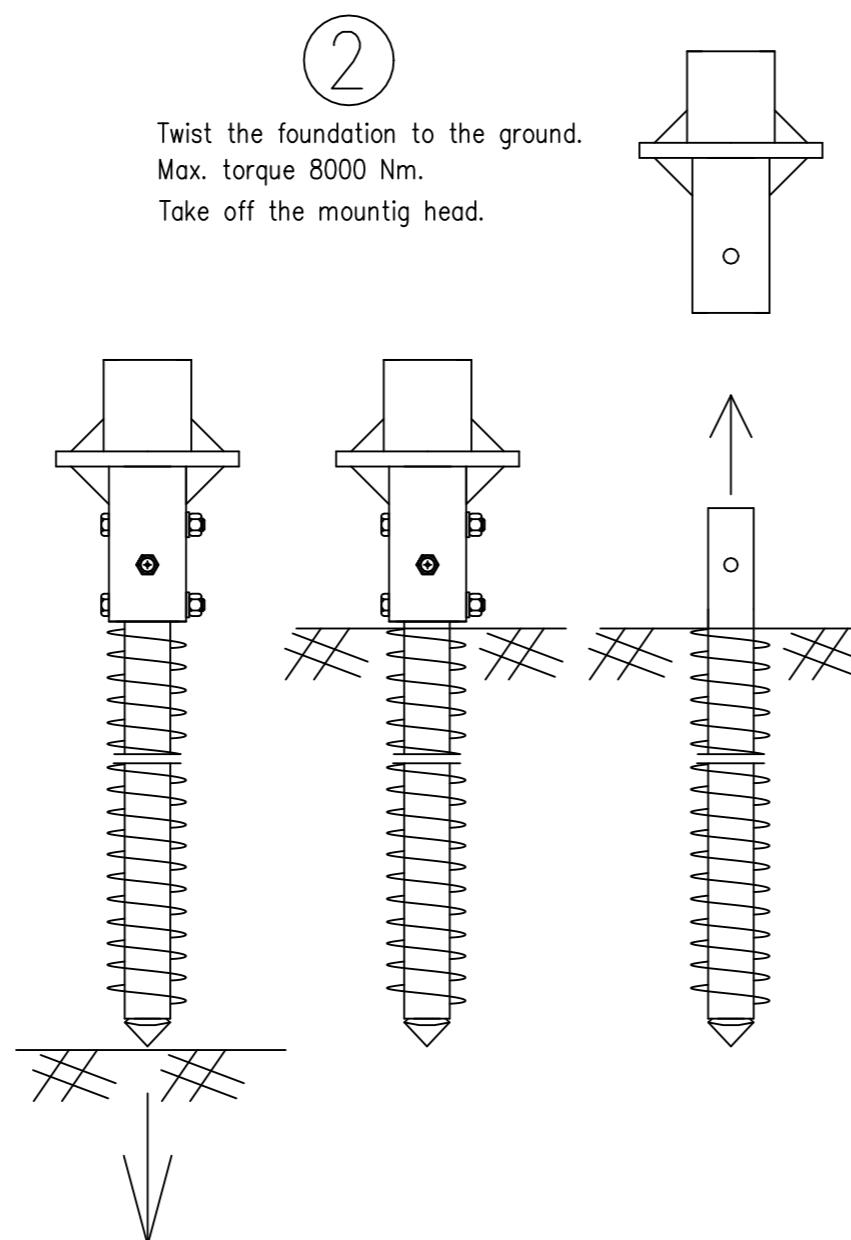


③

Connect PilEX foundation with extenioner and with installation head.
Twist it to the ground.
Max. torque 8000 Nm.
Take off the installation head.

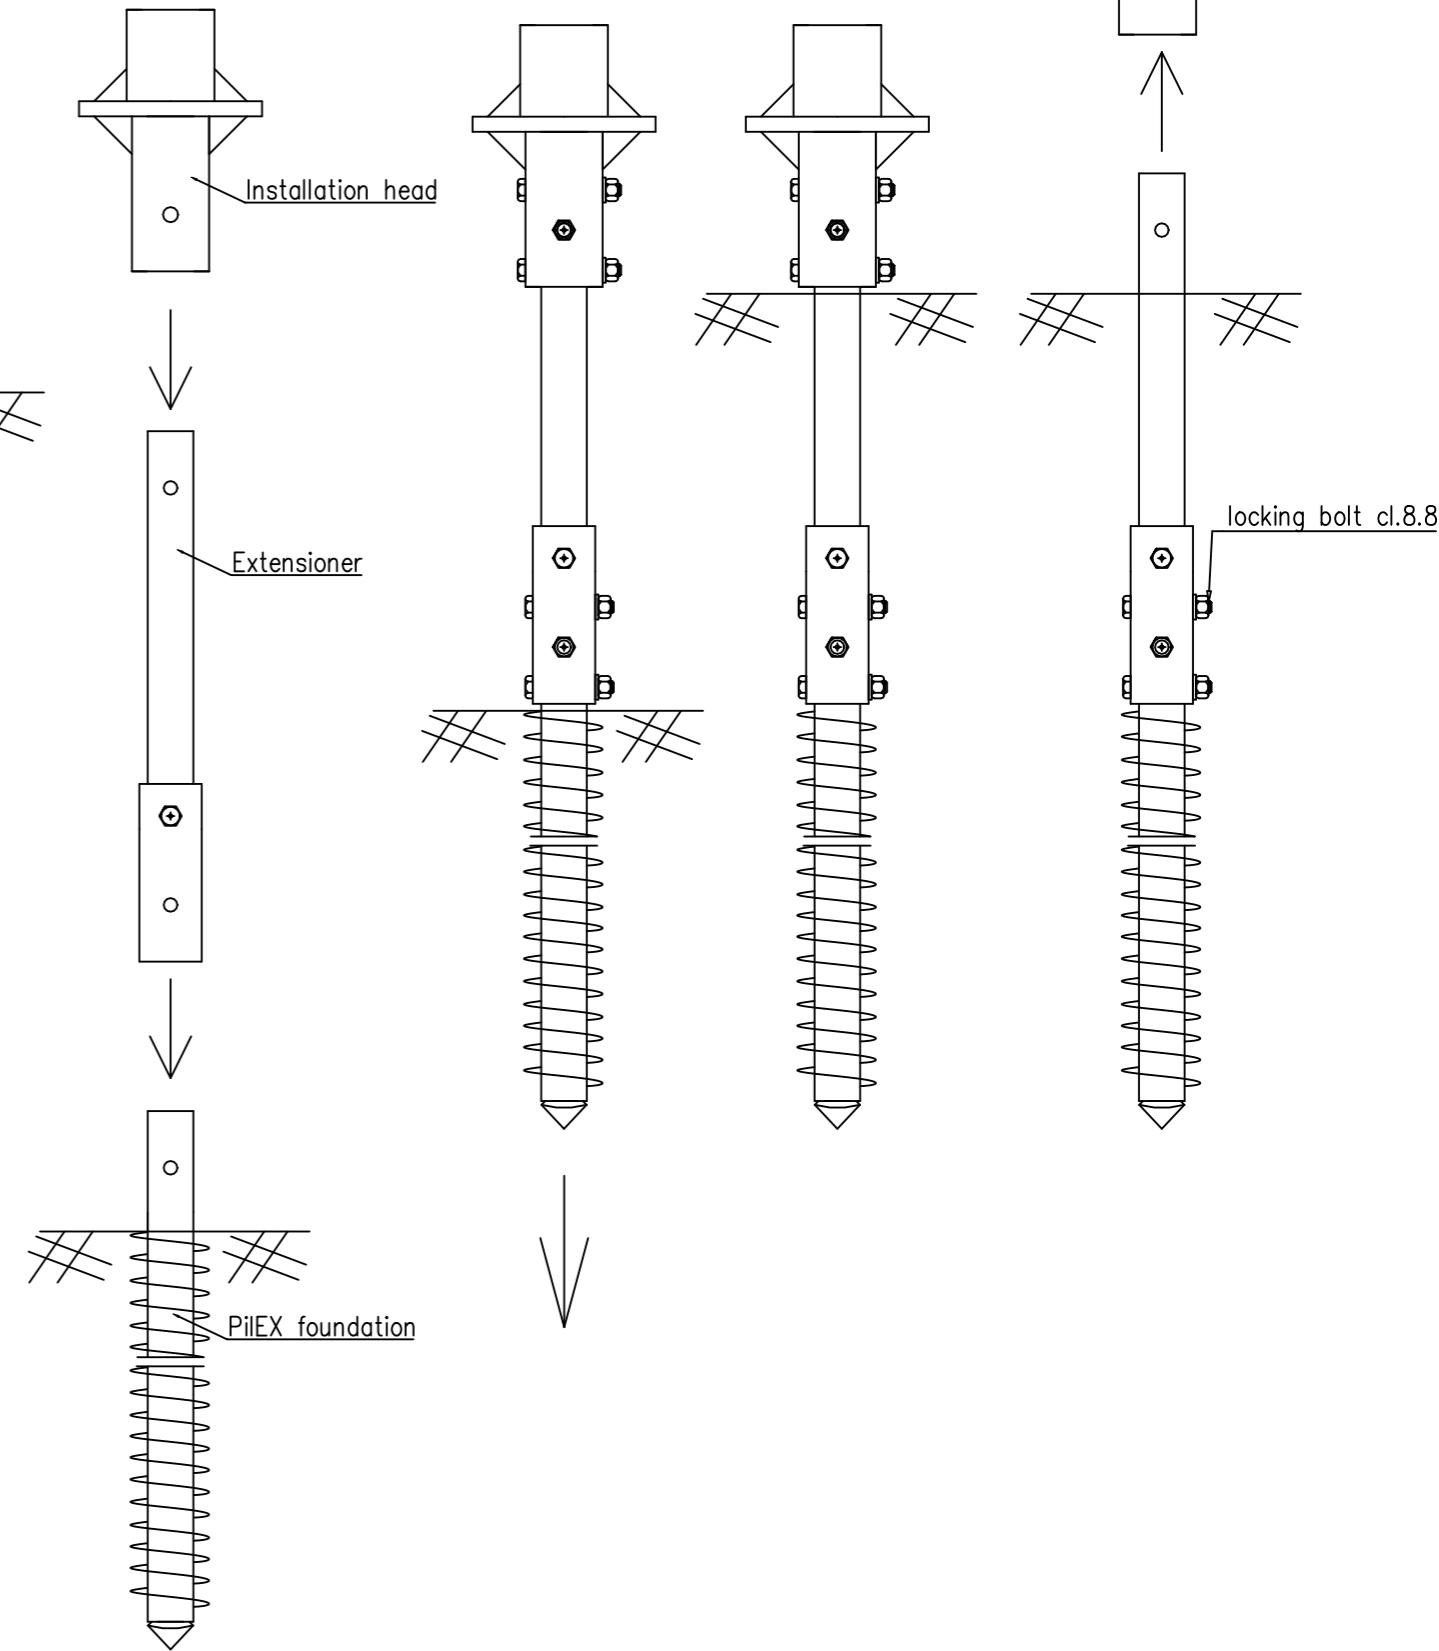

4

Connect extesioner with another extesioner and with installation head.
Twist it to the ground.
Max. torque 8000 Nm.
Add another extesioner if needed.

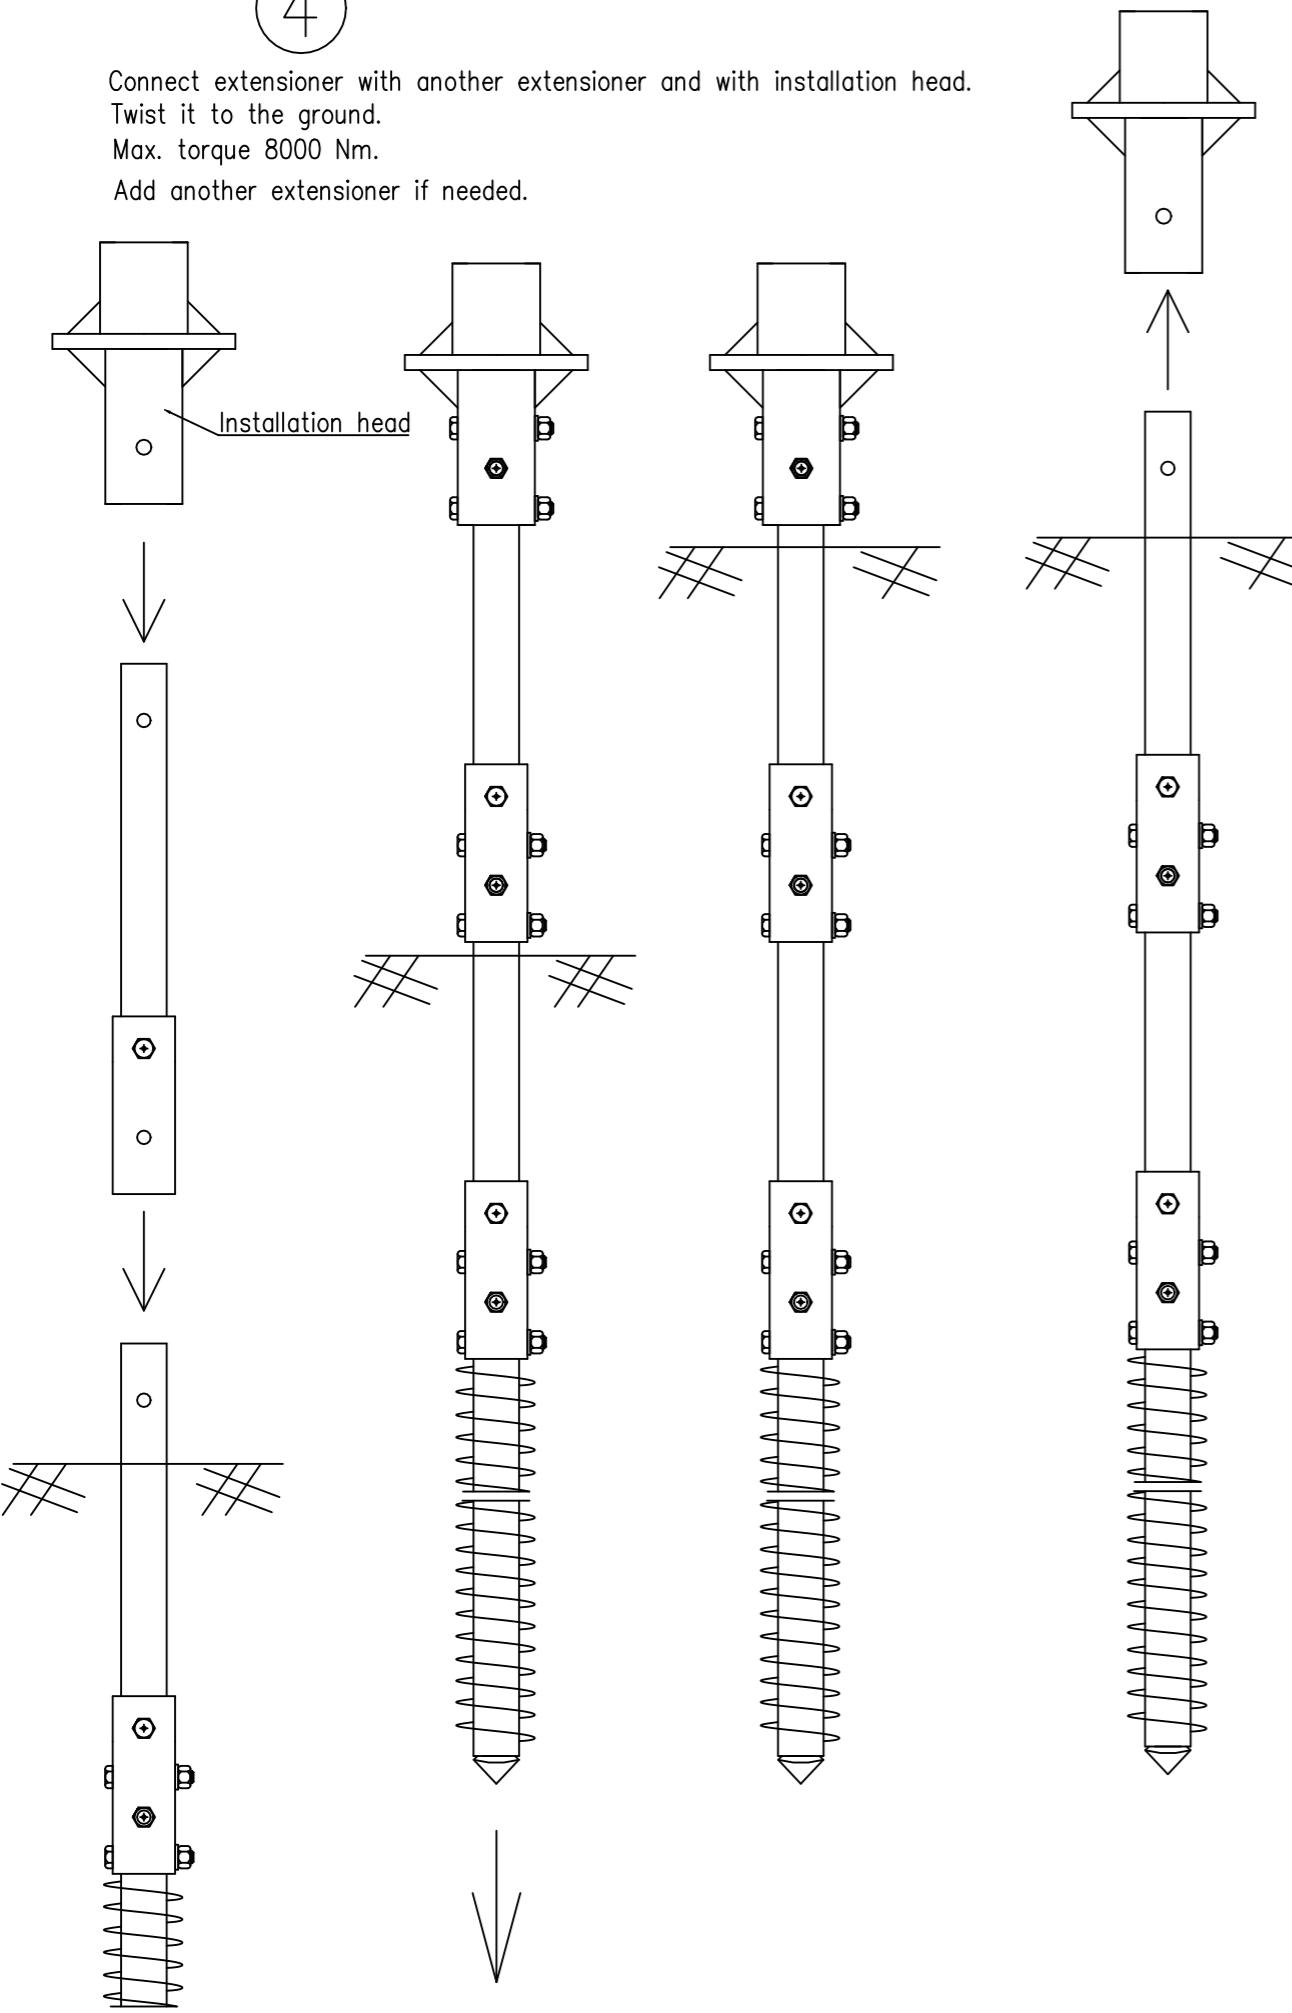

5

Conect mounting head (U-bracket, L-bracket or other type) to the last extesioner.

